



## Installation Instructions

PR-12, PR-12BE and PR-20BE Active Antenna Power Supplies




All power supplies are strapped for either 110 or 220 VAC at the factory. The strapping can be changed by a qualified technician in the field, as shown on the diagram at the bottom of this page.

The AC input block accepts either **110 or 220VAC** (depending on strapping).

- Pin 1 AC Hot (connect one AC lead here)
- Pin 2: Not used.
- Pin 3: Neutral AC (connect other AC lead here).
- Pin 4: Ground or Cable Shield


The DC input block accepts either **12 VDC or 24 VDC**.

- Pin 1: +12VDC
- Pin 2: +24VDC
- Pin 3 Negative

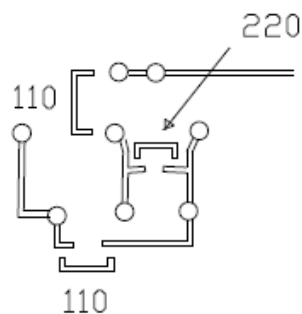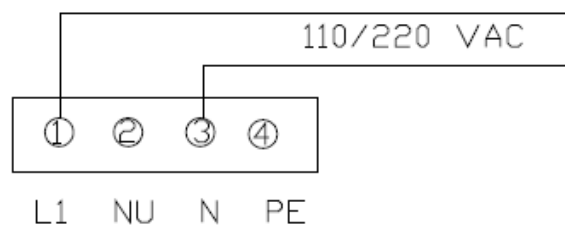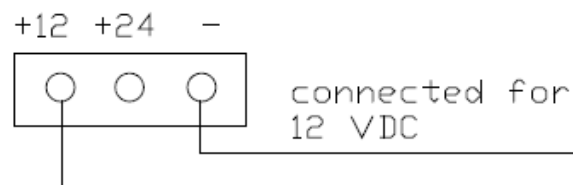



## PR-12BE Component Layout Diagram

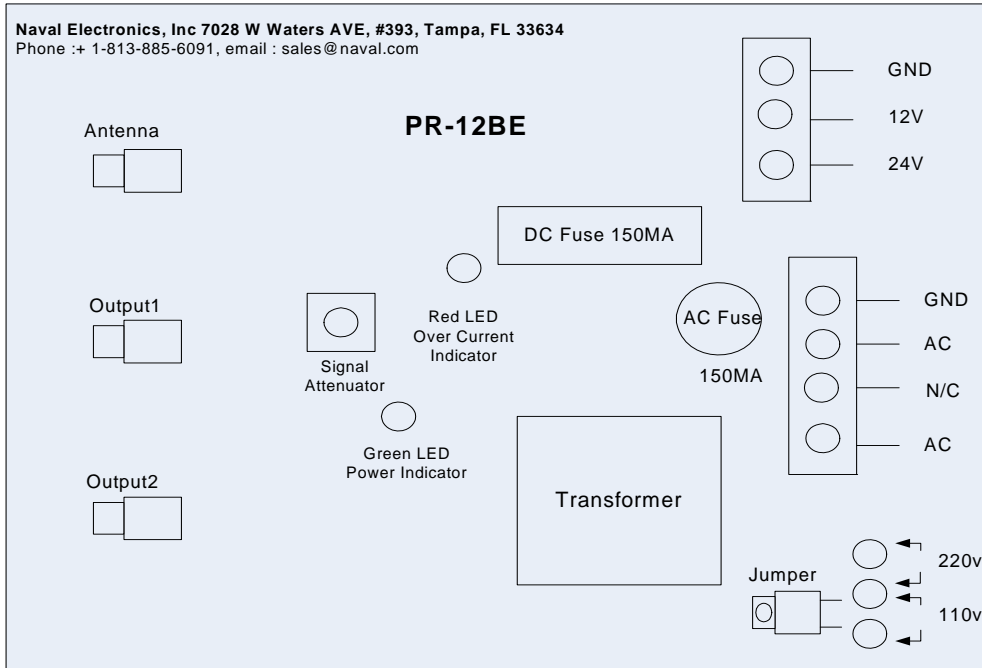

## PR-20BE Component Layout Diagram

